



Changing AP101/AP102 Filter:

1. Turn shut-off valve clockwise to "Off" position.
2. Remove housing by sliding wrench up toward head then turn to the left.
3. Wipe housing clean and insert new cartridge.
4. Lubricate o-ring and screw housing into head.
5. Turn shut-off valve back to "On" position.