



## Change AP200 Filter:

1. Turn off water to filter.
2. Open faucet to relieve pressure.
3. Unscrew housing.
4. Unscrew cartridge.
5. Wipe housing clean - lubricate o-ring with petroleum jelly.
6. Screw in new cartridge.