



Changing AP801/AP802 Filter

1. Turn off incoming water by isolating unit with existing valves on water distribution system
2. Bleed pressure from the unit by depressing the red button on the top of the unit
3. Remove housing by sliding wrench up toward head then turn left to unscrew.
4. Wipe housing clean and insert new cartridge.
5. Lubricate o-ring and screw housing into head.
6. Turn water back on.